BODET Scorepad





User manual - Multisports



BODET Time & Sport

1 rue du Général de Gaulle 49340 Trémentines I France Tel: +33 (0)2 41 71 72







1. Multisports

- 1) Select Multisport.
- 2) Select a configuration from the list:

MULTISPORT 2x30 min (stopwatch and score)

MULTISPORT 2x30 min (stopwatch, score and fouls)

MULTISPORT 4x15 min (stopwatch and score)

MULTISPORT 1x19 min (stopwatch and score)

□

Configurations identified by \bigcirc can only be edited with the club access code. The club Access code is "1234". It can be changed in the "Club access" menu.

3) Screen in MULTISPORT 2x30 min match mode:



Pressing a game setting brings up a new window in which you can:

- edit the length of each period. The buzzer can be triggered at each end of period and the timer reset.
- 2 edit colour of team shirts and game markings. Standard colours are provided plus a palette to select each team's colours.



- 3 call a time-out. To start the countdown, press the START > button. Add or delete a time-out by pressing Correction > .
- 4 add or delete a point to the team's score.
- **5** add 1 point to the team's score.
- 6 edit the configuration settings (see next page for the list of settings).
- display the next period.
- 8 start a new match. Caution: the match in progress will be lost.

> ENTERING CONFIGURATION SETTINGS

1) Click 🔑 to edit a configuration.

Note: All these settings are accessible from the Advanced Settings menu.

The list of editable settings is given below:

Headings	Settings	Default values	Description
Match			
	Display mode	Score and stopwatch	3 choices available: Score only, Score and stopwatch, Score and time
	Period number	2	1 to 9 in steps of 1
	Period duration	30:00	1 to 90 minutes in steps of 1 0 to 59 secondes in steps of 1
	Period mode	UP	UP (counting) or DOWN (countdown)
	Cumulative period	ON	Function enabled using the ON/OFF button
	End of period Horn	5	Function enabled using the ON/OFF button 0 to 5 seconds in steps of 1
Overtime			
	Overtime number	2	Function enabled using the ON/OFF button 1 to 9 periods in steps of 1
	Overtime duration	5:00	1 to 90 minutes in steps of 1 0 to 59 seconds in steps of 1
	Rest time in overtime	2:00	Function enabled using the ON/OFF button 0 to 90 minutes in steps of 1 0 to 59 seconds in steps of 1
Rest time			
	Half time horn	OFF OFF	Buzzer duration to call a rest time Function enabled using the ON/OFF button 1 to 5 minutes in steps of 1 0 to 59 secondes in steps of 1 Buzzer can be triggered for end of rest-time
	Half time duration	10:00	Function enabled using the ON/OFF button 0 to 90 minutes in steps of 1 0 to 59 seconds in steps of 1
	Duration before overtime	2	Function enabled using the ON/OFF button 1 to 90 minutes in steps of 1 0 to 59 seconds in steps of 1
Points and fouls			
	Total team fouls	OFF	Function enables using the ON/OFF button. Option to reset fouls for each period or at half-time. Accumulated fouls can be set from 1 to 50.
Time-Out			
	Horn TO	10s OFF	Buzzer duration to call a time-out Function enabled using the ON/OFF button 0 to 20 seconds in steps of 1 Buzzer can be triggered for end of time-out
	TO dots	half-time 3	Function enables using the ON/OFF button. Display of the time-out indicators 1 to 6 indicators Time-out duration 0 to 2 minutes in steps of 1 0 to 59 secondes in steps of 1 Time-out reset per period, half-time or OFF
Various			
	Maintain result	10s	Function enabled using the ON/OFF button. 1 to 90 secondes
НДМІ			
	HDMI display		Choice of HDMI display
	Sponsor logo	OFF	Possibility to select the display of the sponsors' logos
	Wallpaper		Possibility to select as default a solid colour or an image as wallpaper for the HDMI display background
	Logo teams	ON	Function enabled using the ON/OFF button