

BODET SCOREPAD



User Manual - Basketball 3x3



www.bodet-sport.com


BODET Time & Sport
1 rue du Général de Gaulle
49340 Trémentines | France
Tel: +33 (0)2 41 71 72 33



Réf.: 608296 B

Ensure on delivery that the product has not been damaged in transport.


1. Basketball 3x3

1) Select  on the home screen.

2) Select a configuration from the list:

BASKET 3x3 National 

BASKET 3x3 1


Configurations identified by  can only be edited with the club code.

The club Access code is “1234”. It can be changed in the “Club access” menu.



3) Screen in BASKET 3x3 National match mode:



Pressing a game setting brings up a new window in which you can:


- 1 edit the length : duration of each period. The buzzer can be triggered at each end of period and the timer reset.
- 2 edit colour of team shirts and game markings. A standard colour scheme is provided as well as a palette to set your own colour.
- 3 edit the name of the team. After pressing HOME or VISITORS, press  **Team config**, to edit the configuration of both teams (switch teams, edit team screen name, activate players, choice of colours, load configuration, create a new configuration or delete this configuration):



- 4 call a time-out. To start the countdown, press the **START**  button. Add or delete a time-out by pressing **Correction** .
- 5 add or delete a foul.
- 6 add or delete a point
- 7 add 1 or 2 points.
- 8 edit the configuration settings (see next page for the list of settings).
- 9 add and then start a scrolling message.
- 10 indicate the name of the competition.
- 11 start a new match. **Warning: the match in progress will be lost.**

> ENTERING CONFIGURATION SETTINGS

1) Click  to edit a configuration.

Note : All these settings are accessible from the  **Settings** menu.

The list of editable settings is given below:

Basket 3x3	BASKET 3x3 1	BASKET 3x3 National
Match		
Period duration	10:00	10:00
Period mode	DOWN	DOWN
End period Horn	5s	5s
Possession		
Time possession	12s	12s
Horn	2s	2s
Timer auto stop	OFF	OFF
Display keyboard	ON	ON
Points and Fouls		
Max point	21	21
Bonus 1	7	7
Bonus 2	10	10
Time-Out		
TO dots		
Number of TO dots	1	1
Duration TO	30s	30s
Horn TO		
Horn duration before end T-O	OFF	OFF
Horn end T-O	OFF	OFF
Horn at start	OFF	OFF
Various		
Beeper buttons	ON	ON
HDMI		
HDMI display
Sponsor logo
Wallpaper
Logo teams	ON	ON

Explanation of parameters:

Basket 3x3	Comments
Match	
Period duration	Choose the duration of each period
Period mode	Choose the counting or countdown mode for the period.
End period Horn	Choose the duration of the horn when the game period is over
Possession	

Time possession	Choose the duration of time possession
Horn	Choose the duration of the horn
Timer auto stop	Function enabled using the ON/OFF button
Display keyboard	Function enabled using the ON/OFF button
Points and Fouls	
Max point	Choose the maximum number of points per game
Bonus 1	Award a bonus
Bonus 2	Award a bonus
Time-Out	
TO dots	
Number of TO dots	Choose the number of TO dots
Duration TO	Choose the duration of each time out
Horn TO	
Horn duration before end T-O	Choose the duration of the horn at the end of each time out.
Horn end T-O	Function enabled using the ON/OFF button
Horn at start	Function enabled using the ON/OFF button
Various	
Beeper buttons	Function enabled using the ON/OFF button
HDMI	
HDMI display	Choose HMDI display type, simple or full.
Sponsor logo	Choose whether to display sponsor logos at the bottom of the HDMI screen
Wallpaper	Choose the HDMI background image
Logo teams	Function enabled using the ON/OFF button